ANTIQUE TRACTOR PULLS/ Farm stock

Classes:

Antique stock

- 4500, 5000,5500,6000,6500,7000,7500,8000,8500 (Up to 1960 only)
- 9000,9500,10000 Farm stock- (1960- Present Year Permitted)

Antique Open

- 4500, 5500, 6500. (Up to 1960 only)
- 7500,8500,9500,10000 (1960- Present Year Permitted) (Turbos permitted)

1752 Mahoning Road, Home, PA 15747

- \$10.00 ALL TRACK GATE PIT ENTRY.
- All persons entering the track gate must sign a release form

and receive an armband.

- HOOK FEE: \$0.00 first hook, \$10.00 second hook fee.
- An index card will be given to each puller upon pit entry.

Please fill out the card and bring it with you when registering.

Rules and Regulations

General Regulations for Farm Tractor Pulls

- 1. Classes begin at 4,500 lbs. and go up to 10,000 lbs.
- 2. Classes are Antique/Stock and Open.
- 3. One driver per tractor, per class.
- 4. One hook per tractor per class.
- 5. Antique/Stock Classes: tractor must be older than 1960 or in production prior to 1960.
- 6. Antique is a 4-mph limit class, any gear.
- 7. Only 2 horn warning will be allowed for going over the 4.0 mph speed limit, third warning will
- 1. result in a red flag distance is then set.
- 8. Winners to be determined by the total distance pulled.
- 9. Must pull from a solid drawbar. (solid in all directions, all classes).
- 10. Drawbar will be a maximum of 18" in all Antique Classes.
- 11. Drawbar will be a maximum of 20" in all Open Classes.
- 12. Wheelie bars permitted.
- 13. No four-wheel drive, dual wheels or chains permitted.
- 14. Maximum tire size 4500lb.-6500lb. will be 15.5 x 38.
- 15. Maximum tire size 7500lb.-8500lb. will be 16.9 x 38.
- 16. Maximum tire size 9000- 10000lb. will be 18.4 x 38.
- 17. Top Cut Tires maximum is permitted for Antique/Stock classes.

- 18. Full cut tires for Open classes.
- 19. No adjustments of hydraulic hitch while pulling.
- 20. All weights must be securely fastened, any loss of weights on track is immediate DQ.
- 21. No turbos or blowers are permitted in Antique/Stock classes.
- 22. Turbos permitted in open class (7,500-10,000 0nly)
- 23. Tractor must have stock block to pull in Stock Classes.
- 24. Suitcase weights and wheel weights are permitted.
- 25. No suitcase weights can be attached to the wheels.
- 26. All weights must be securely fastened, any loss of weights on track is immediate DQ.
- 27. Drivers must always remain in their seat.
- 28. Open class entries: Helmet, fire suit, leather shoes recommended.
- 29. No tractor will be weighed without a completed waiver release.
- 30. All tractors will be visually inspected prior to pulling, the committee has the right to reject any entry.
- 31. The fair scales will be the only recognized weighing device unless inoperable.
- 32. Minimum of 14 years of age are permitted on tractor, all minors must have written consent from
- 2. parent/guardian with proper ID and must sign a waiver.
- 33. Anyone under the age of 18 must be signed in by a parent or legal guardian.
- 34. All tractor drivers must be signed up by 6:30 pm.
- 35. Once a class has started, the entry will close.
- 36. The pull may be stopped or cancelled when unsafe conditions exist to further continue the show.
- 37. Judges have the right to stop any contestant's tractor when operated in an unsafe manner, on the track and in the pits.
- 38. All rules are subject to change at the judge's discretion.
- 39. No profanity or altercations will be tolerated. This will result in removal from the grounds.
- 40. No alcohol or drugs will be tolerated.
- 41. NO REFUNDS
- 42. General Admission paid entry does not include pits. A pit armband must be purchased for any entry. Those found in the pit area without a pit armband will be asked to (1.) leave the area or (2.) purchase an armband.